

Heater

You can operate the heater by turning the control lever to thermostat position 1 - 5 and pressing it down as far as it will go (15 seconds). Ignition occurs automatically (ignition spark audible) until the flame is burning. Once the flame is burning, keep the button pressed for another 10 seconds.